n Upgrade Firmware:更新韌體

| B MDNET Tools 0130 | J | | | | | | | | \mathbf{X} |
|------------------------|--------|--------------|-------------------|-------------------|----------------|--------------|--------------|--------|--------------|
| [| No | Name | MAC Address | IP Address | Operating Mode | Hardware-Ver | Firmware-Ver | Status | |
| Search | 1 | SYRIS-MDNET1 | 00-1D-34-18-0F-01 | 192.168.1.119 | TCP Server | 0201 | 0103 | Lock | 1 |
| | 2 | MDNET1-Jerry | 00-1D-34-18-1A-01 | 192.168.1.221 | TCP Server | 0201 | 0103 | Lock | |
| Configure | 3 4 | F/ 開啓 S' | | | | | | ? 🗙 | - |
| | 5 | S' 查詢(I): | DNET_Too | ls | • | 🗢 🗈 💣 | | | |
| Data Test | | à | MDNET2_V01 | 03.SYB | | | | | |
| Upgrade Firmware | | 我最近的文件 | | | | | | | |
| | | | | | | | | | |
| <u>I</u> <u>C</u> lose | | 「泉面」 | | | | | | | |
| | | がの文件 | | | | | | | |
| | | | | | | | | | |
| | | 我的電腦 | | | | | | | |
| | | | | | | | | | |
| | | 網路上的芳鄰 | | | | | | | |
| | | | 檔名(N): | MDNET2_V010 | 3 | • | 開啓 | Ø | |
| | | | 檔案類型(I): | Firmware files (* | SYB) | • | 取? | 肖 | |

MDNET網路轉換器模組說明書



璽瑞股份有限公司

403台中市中港路一段12號21樓之2 電話 : +886-4-2207-8888 傳真:886-4-2207-9999 電子信箱:<u>service@syris.com</u> 網站: <u>http://www.syris.com</u>

December 22, 2008 Ver:2.21

MDNET WIRING DIAGRAM



DB9 Connect PIN define

| PIN | Function | Note |
|-----|-----------|----------------------|
| 1 | | No Connect |
| 2 | RS-232 RX | Blue(藍) |
| 3 | RS-232 TX | Violet(紫) |
| 4 | RS-232 | Orange(橙)No Function |
| | DTR | |
| 5 | GND | Black (黑) |
| 6 | RS-232 | Brown(棕) No Function |
| | DSR | |
| 7 | RS-485 + | Yellow(黃) |
| 8 | RS-485 - | Green(綠) |
| 9 | GND | Black(黑) |

Set to Factory Default (SW1 Hold 5 Second)

```
IP = 192.168.1.101
Gateway = 192.168.1.254
Netmask = 255.255.255.0
Band Rate = 19200, E, 8, 1
ID = 0001
Start Delay Time = 1500
End Delay Time = 500
```

MDNET規格:

| Items / Specs | MDNET-1 MDNET-95A MDNET-1-A | | | | | | |
|-----------------------|-----------------------------|---|----------------|--|--|--|--|
| 區域網路 | 10BASE-T/100BASE-TX | 10BASE-T/100BASE-TX port, 10/100Mbps auto-sensing | | | | | |
| TP port | RJ-45 phone jack | | | | | | |
| 通訊協定 | TCP Server/Client, UDP | | | | | | |
| 通信格式 | RS-232 / RS-485 (Auto-de | etecting) | | | | | |
| 連接串口 | 9 PIN D-SUB (RS-232 / R | 2S-485) | | | | | |
| 通信速度 | 19,200 bps (4,800 \ 9,600 | 19,200 \cdot 38,400 \cdot 57,60 | 0 、 115,200) | | | | |
| Parity | None , Event , Odd | | | | | | |
| Data bits / Stop bits | 8/1 | | | | | | |
| 配合軟體 | None | SYW95A-NET | SYSOFT-95A-260 | | | | |
| 狀態指示 | 4 LED (Power , RX/TX , | Link , Active) | | | | | |
| 顏色 | Beige | Beige | | | | | |
| 工作濕度 | 10% to 95% (Non-condens | sing) | | | | | |
| 工作溫度 | -20°℃ to 70°℃ | | | | | | |
| 儲存溫度 | -30℃ to 80℃ | | | | | | |
| Magnetic isolation | 1.5KV for Ethernet | | | | | | |
| 輸入電壓 | 8V to 15V DC | | | | | | |
| 網路供電模組 | POE 模組(選購配件) | | | | | | |
| 尺寸(mm) | 110W x 136H x 32.5D | | | | | | |

This specification is preliminary and is subject to change without prior notice.

n Data Test

點選 Data Test 開啓資料傳輸測試。

| B MDNET Tools 0130 | J | | | | | | | |
|--------------------|----|--------------|-------------------|---------------|----------------|--------------|--------------|--------|
| | No | Name | MAC Address | IP Address | Operating Mode | Hardware-Ver | Firmware-Ver | Status |
| Search | 1 | SYRIS-MDNET1 | 00-1D-34-18-0F-01 | 192.168.1.119 | TCP Server | 0201 | 0103 | Lock |
| | 2 | MDNET1-Jerry | 00-1D-34-18-1A-01 | 192.168.1.221 | TCP Server | 0201 | 0103 | Lock |
| Configure | 3 | FAE-Eric | 00-1D-34-28-29-01 | 192.168.1.223 | TCP Server | 0102 | 0103 | |
| Conligure | 4 | SYRIS-MDNET1 | 00-1D-34-18-60-57 | 192.168.1.93 | TCP Client | 0201 | 0103 | Lock |
| | 5 | SYRIS-MDNET1 | 00-1D-34-18-60-63 | 192.168.1.94 | TCP Server | 0201 | 0103 | Lock |
| Data Test | | - | | | | | | |
| | L | | | | | | | |
| Upgrado Firmwaro | L | | | | | | | |
| opgrade i milware | | | | | | | | |
| <u>I</u> Close | | | | | | | | |
| |] | | | | | | | |
| | | | | | | | | |

設定與欲連線的Port與速率,點選 <u>Connect</u> 連線裝置。

- 點選 Loop 可連續傳送訊息,於Delay部分設定時間。
- 點選 <u>Sequence</u> 則會在傳送的訊息前加上序號。

| 192.168.1.221 | Device Port 5001 |
|------------------|---|
| 192.168.1.221 | Device Port 5001 |
| 1 | Bottoo rotajeret |
| Connect | DisConnect |
| | |
| Data test (TCP) | |
| ABC | |
| Loop 🗖 Sequence | Delay: 1000 ms |
| | Send data |
| TCP Data Monitor | |
| | |
| |)ata test (TCP) BC [•] Loop T Sequence [•] CP Data Monitor |

n Configuration-Accessible IPs

可設定四組擁有存取權限的IP。

| B Configuration [MDNET-1] | |
|---------------------------|---|
| | Basic Network Operating Mode Accessible IPs Password Serial |
| | Accessible IP 01: 0 0 0 |
| | Accessible IP 02: 0 0 0 |
| | Accessible IP 03: 0 0 0 |
| | Accessible IP 04: 0 0 0 |
| | V OK (Write) |

n Configuration-Password

設定進入控制模式時候的密碼。

| S Configuration [MDNET-1] | | |
|---------------------------|------------------------------------|---------------------------|
| 1 | Basic Network Operating Mode Acces | sible IPs Password Serial |
| | Password: | |
| | | |
| | V OK (Write) | 🗶 Cancel |

n Configuration-Serial

設定速率。

| Sconfiguration [MDNET-1] | |
|--------------------------|---|
| | Basic Network Operating Mode Accessible IPs Password Serial |
| | Serial: 115200,n,8,1 |
| | V OK (Write) |

MDNET 工具使用說明 (繁體中文)

n 連結裝置

開啓MDNET2_Tools後,點選 _Search 搜尋裝置資料。

| B MDNET Tools 0130 | | | | | | | | | \times |
|--------------------|----|--------------|-------------------|---------------|----------------|--------------|--------------|--------|----------|
| | No | Name | MAC Address | IP Address | Operating Mode | Hardware-Ver | Firmware-Ver | Status | |
| Search | 1 | SYRIS-MDNET1 | 00-1D-34-18-0F-01 | 192.168.1.119 | TCP Server | 0201 | 0103 | Lock | |
| | 2 | MDNET1-Jerry | 00-1D-34-18-1A-01 | 192.168.1.221 | TCP Server | 0201 | 0103 | Lock | |
| Configure | 3 | FAE-Eric | 00-1D-34-28-29-01 | 192.168.1.223 | TCP Server | 0102 | 0103 | | |
| Conligure | 4 | SYRIS-MDNET1 | 00-1D-34-18-60-57 | 192.168.1.93 | TCP Client | 0201 | 0103 | Lock | |
| | 5 | SYRIS-MDNET1 | 00-1D-34-18-60-63 | 192.168.1.94 | TCP Server | 0201 | 0103 | Lock | |
| Data Test | | | | | | | | | |
| | | | | | | | | | |
| Ungrade Firmware | | | | | | | | | |
| | | | | | | | | | |
| <u>I</u> Close | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |

n Configure

雙擊裝置資料行或是點選 <u>Configure</u> 進入控制模式。

| MDNET Tools 0130 | | | | | | | | |
|------------------------|----|-------------------------|-------------------|---------------------|-----------------------|-----------------------|--------------|--------|
| 1 | No | Name | MAC Address | IP Address | Operating Mode | Hardware-Ver | Firmware-Ver | Status |
| Search | 1 | SYRIS-MDNET1 | 00-1D-34-18-0F-01 | 192.168.1.119 | TCP Server | 0201 | 0103 | Lock |
| | 2 | MDNET1-Jerry | 00-1D-34-18-1A-01 | 192.168.1.221 | TCP Server | 0201 | 0103 | Lock |
| Configure | 3 | Configuration [MD] | NET-1] | | | | X | |
| Conligure | 4 | Information | (| Basic Network Opera | ating Mode Accessible | e IPs Password Se | erial | Lock |
| | 5 | MAC Address :00-1D-34- | 18-1A-01 | | | · · | | Lock |
| Data Test | | Serial Number :0826000 | 1 | Device Name | B: MDNET1-Jerry | | | |
| | | Firmware Version : 0103 | | Device IE | o : 0001 | | | |
| Upgrade Firmware | | Timiwale Version, 0105 | | RS485 Setup | | | | |
| | | | | | LAV 500 100 | ~ 0000 | | |
| . | | | | n3403 31An1 Dt | LAT: 300 100 | 3333 us | | |
| <u>I</u> <u>C</u> lose | | | | RS485 END DE | ELAY: 500 100 | ~ 9999 us | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | 🗸 OK (Writ | e) | 🗶 Ca | ncel | |

n Configuration-Basic

- 1. 於 Device Name 欄位輸入裝置名稱。
- 2. 於 Device ID 欄位輸入設定ID。
- 3. 於 RS485 START DELAY 欄位輸入設定延遲時間。
- 4. 於 RS485 ENDT DELAY 欄位輸入設定延遲時間。
- 5. 確認後點選 OK(Write) 寫入。

| Configuration [MDNET-1] | | × |
|-------------------------|--|---|
| | Basic Network Operating Mode Accessible IPs Password Serial 1. Device Name : MDNET1Jerry 2. Device ID : 0001 RS485 Setup 3. RS485 START DELAY: 500 4. RS485 END DELAY: 500 100 ~ 9999 us | |
| | 5. 🗸 OK (Write) 🗙 Cancel | |

n Configuration-Network

選擇 <u>DHCP</u> 或是設定 IP相關資訊

| Configuration [MDNET-1] | |
|-------------------------|---|
| | Basic Network Operating Mode Accessible IPs Password Serial |
| | T DHCP |
| | Static IP |
| | IP Address: 192 168 1 221 |
| | Netmask Address: 255 255 0 |
| | Gateway Address: 192 168 1 254 |
| | DNS Server1: 0 0 0 |
| | DNS Server2: 0 0 0 |
| | |
| | V OK (Write) |

n Configuration-Operating Mode

- 1. TCP Server Mode:設定Local Port, Max Connection可達4。
- 2. TCP Client Mode:可設定Any Character或Star up模式,最多可設定四組IP。
- **3. UDP Mod**:設定Local Port,最多可設定四組IP。
- 4. Data Packing:設定段落字元(接收到某特定字元時,將傳出該字元前的訊息) Force Tx Timeout:如果遲遲未收到指定段落字元,則在多久時間後送出訊息。
- 5. Miscellaneous: TCP Alive Check Timeout 連線達到設定時間後即斷線;

Inactivity Timeout - 於設定時間內無資料傳輸(UART)即斷線。

| Configuration [MDNET-1] | |
|--------------------------------|---|
| Information | Basic Network Operating Mode Accessible IPs Password Serial |
| MAC Address :00-1D-34-18-30-02 | TCP Server Mode |
| Serial Number :08480002 | Local Port: 5001 Max Connection: 1 - |
| Firmware Version : 0104 | |
| Hardware Version : 0201 | |
| | Destination IP 01: 0 0 0 0 Port: 5001 |
| | Destination IP 02: 0 0 0 0 Port: 5001 |
| 3 | Destination IP 03: U U U U Port: 5001 |
| | Destination IP 04: U U U Port: DUU |
| | 3. C UDP Mode |
| | Local Port 5001 |
| | Destination IP 01: 0 0 0 Port: 5001 |
| | Destination IP 02: 0 0 0 0 Port: 5001 |
| | Destination IP 03: 0 0 0 0 Port: 5001 |
| | Destination IP 04: 0 0 0 Port: 5001 |
| | 4. Data Packing(Optional) 5. Miscellaneous(Optional) |
| | I Delimiter 1 UD (0 - ff,Hex) I CP Alive Check Timeout |
| | Delimiter 2 00 (0 - ff,Hex) |
| | Force Tx Timeout: 0 (0 - 65535 ms) 0 (0 - 65535 ms) |
| | |
| | |
| | V OK (Write) |