

SYCAPS SYSTEM BASIC Version Operation Manual

Version 1.3

© 2004 by SYRIS Technology Corp.

☐Install SYCAPS SYSTEM software

- 1. Insert the SYRIS software CD into CD-ROM, to execute SYCAPS JINSTALL in the screen, then the screen will display installation message.
- The system will display the beginning screen of Setup Wizard, please click continue install procedure.
- 3. If you want to install the program to a specific location , you may select different location by using _________.
- 4. If you choose to install in the default location, please click
- 5. The system will display the user setting before copy install file, please click confirming the selected install program and setting are correct.
- 6. Click **Finish** to complete the procedure of installation.

To Execute SYCAPS Basic Version


- 1. Double click the short cut of System Basic on the desktop to start SYCAPS basic version program.
- 2. The system will automatically install driver after begin program screen and display the message of connect error, the user only need to follow these steps to complete the driver installation:

① Close the program② Pull out the USB terminal of time recorder③ Re-plugtime recorder in USB

➡ To Execute "Speed Add Card"

1. Use USB cable to plug into computer USB socket and connect it.

2. Double Click the short cut of Stars Stars on the desktop to start SYCAPS System Basic Version will display time recorder connection correct, Need to re-connect and re-execute program when it display unusual connection.

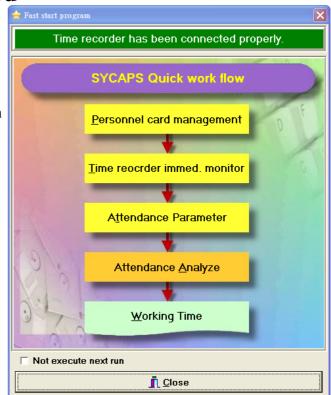

to

after

then to choose

Next:

<u>N</u>ext>

3. If haven't add card, it will automatically display
"Personnel card management" screen. Directly present card can proceed set up card and personnel data, please execute transmission after adding card

All employees	C Used card employees	C Unused card employees
ND.	Name	Display text
	Used c	ard
\$	Used ci rd NO. Cerd ID.	erd

₽Attendance rule setting

The system support a prearrange shift [08:00~17:00], the user can adjust $[Attendance data management <math>\Rightarrow$ Attendance argument setting] by demand. Suppose user alter setting into two timer, the shift can click 1 to proceed setting as follows:

 $008:00 \sim 12:00$ [Need to present card in the beginning of the work and rest in the noon].

 $@13:00 \sim 17:30$ [Need to present card at beginning at noon and off duty in the afternoon].

Present card effective time (Effective interval can be set by practical demand):

①07:00~12:30

08:05~08:15 present card as late, 08:15 present card as absence;11:45~11:55 present card as leave early, before 11:45 present card as absence

@12:30~18:30


13:05~13:15 present card as late, 13:15 present card as absence;17:15~17:25 present card as leave early, before 17:15 present card as absence

The default schedule are based on the rules of default shift for all of the employee, and also has the rules for Saturday Arrange and Holiday (Sunday) Arrange which can be choose. If Saturday Arrange is chosen, all employees' arrange will be arranged by default shift.


- Set up monthly schedule [Attendance data management
 → Attendance argument setting]:
 after select month, click
 to turn system into edit mode, then click
 Arrange
 to
 proceed monthly schedule.
- Overtime set up 【Attendance manage system
 ⇒ Overtime set up 】: including set up overtime list, overtime list surfing and overtime statistics surfing.
- 3. Off day set up 【Attendance manage system
 → Day off set up 】: including set up off day list, off day list surfing and off day list statistics surfing.
- 4. **[T&A data analysis]**: including T&A analysis proceeding **[** able to proceed analysis by specific date or full month **]**, attendance data surfing **[** display out on duty status **]**, absence data surfing, working-hour statistics surfing, monthly T&A surfing, daily T&A surfing and T&A statistics surfing.

SYCAPS Hardware Operation I


1. Login The System

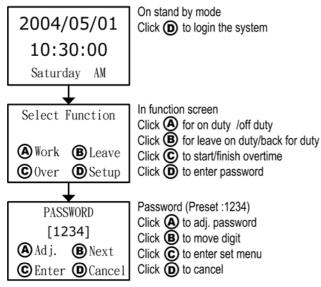


2. Add Card

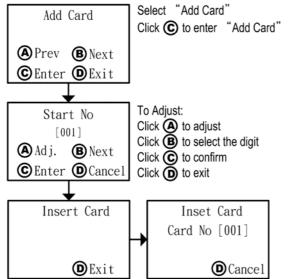

3. Delete Card

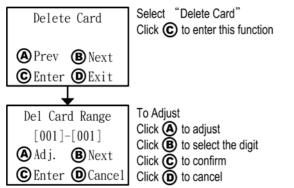


4. Setup Date and Time

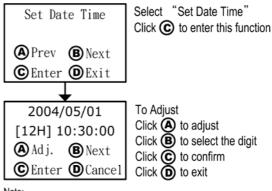


Note:

The date format is (YYYY/MM/DD) The hour display can be [12H] or [24H] The time format is (HH:MM:SS)

5. Setup Password

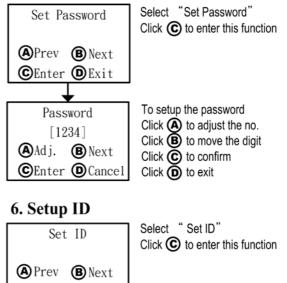


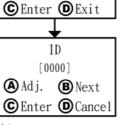

To setup the ID Click (A) to adjust Click (B) to move the digit Click (C) to confirm Click (D) to cancel

ID range: 0001-9999 (preset 0001)

Machine Version Info.

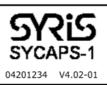


SYCAPS-1 \rightarrow model name 04201234 \rightarrow the serial number V4.02-01 \rightarrow firmware version

Note:

SYCAPS Hardware Operation II


7. Backlight Delay Setup

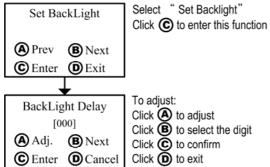

Note:

The range of backlight delay time is between 000-250; 000 is always turn on (unit: sec.)

8. Setup Volume

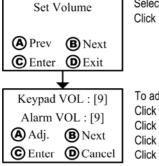


Select "Set Volume" Click (C) to enter this function

To adjust the volume Click (A) to modify Click (B) for different subject Click C to confirm Click (D) to cancel

Note:

Keypad volume range: 0-9;0 is mute Alarm volume range: 0-9;0 is mute

9. Setup Language

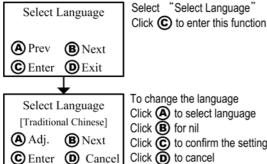



To change the language Click (A) to select language Click **B** for nil Click C to confirm the setting Click (D) to cancel

Note:


The system support [English] > [Traditional Chinese] and [Simplified Chinese] •


10. Check Access Record

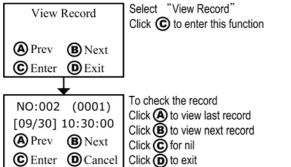


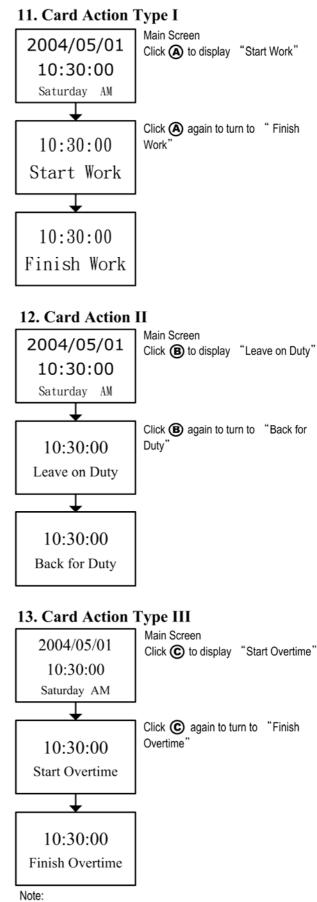

Page 11~13 is for out on duty/absence type operation, select the suitable option then response card.

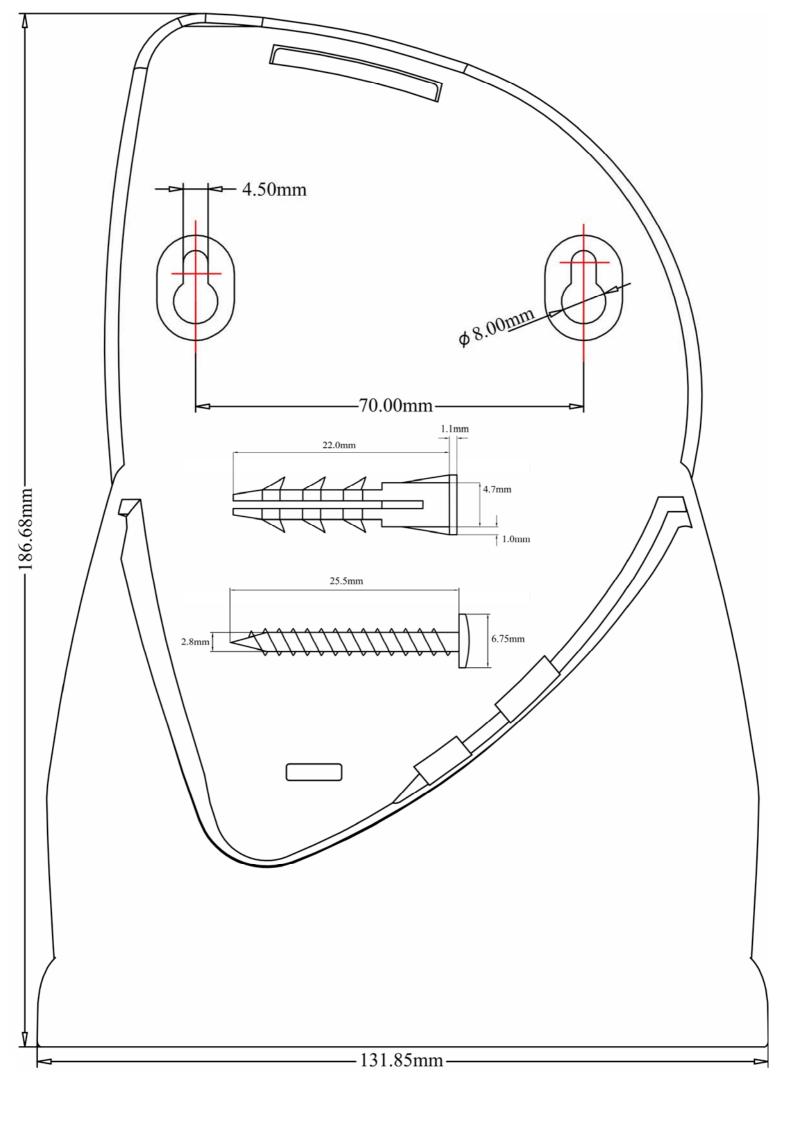

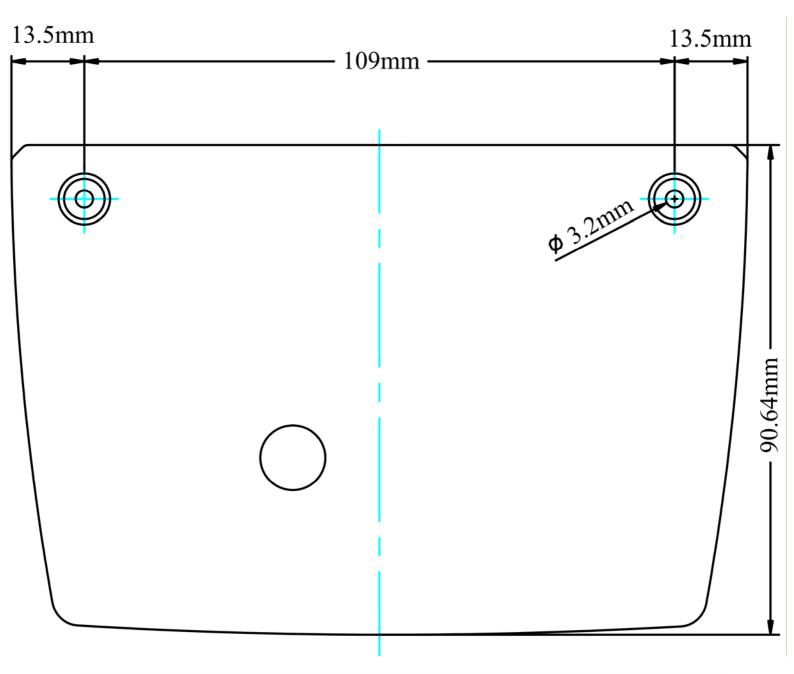

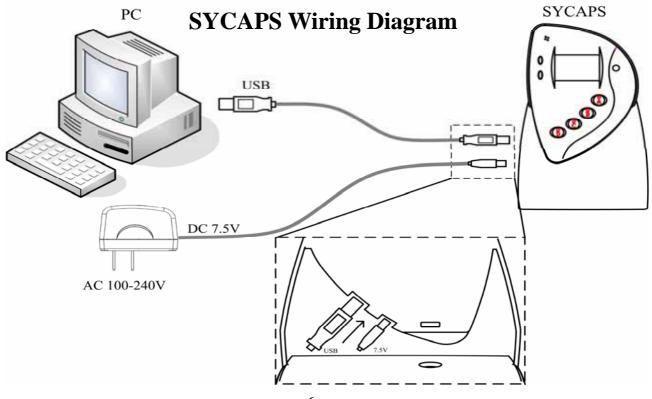



We bring you the future